





Pro Counter Top Parameter Setup Manual

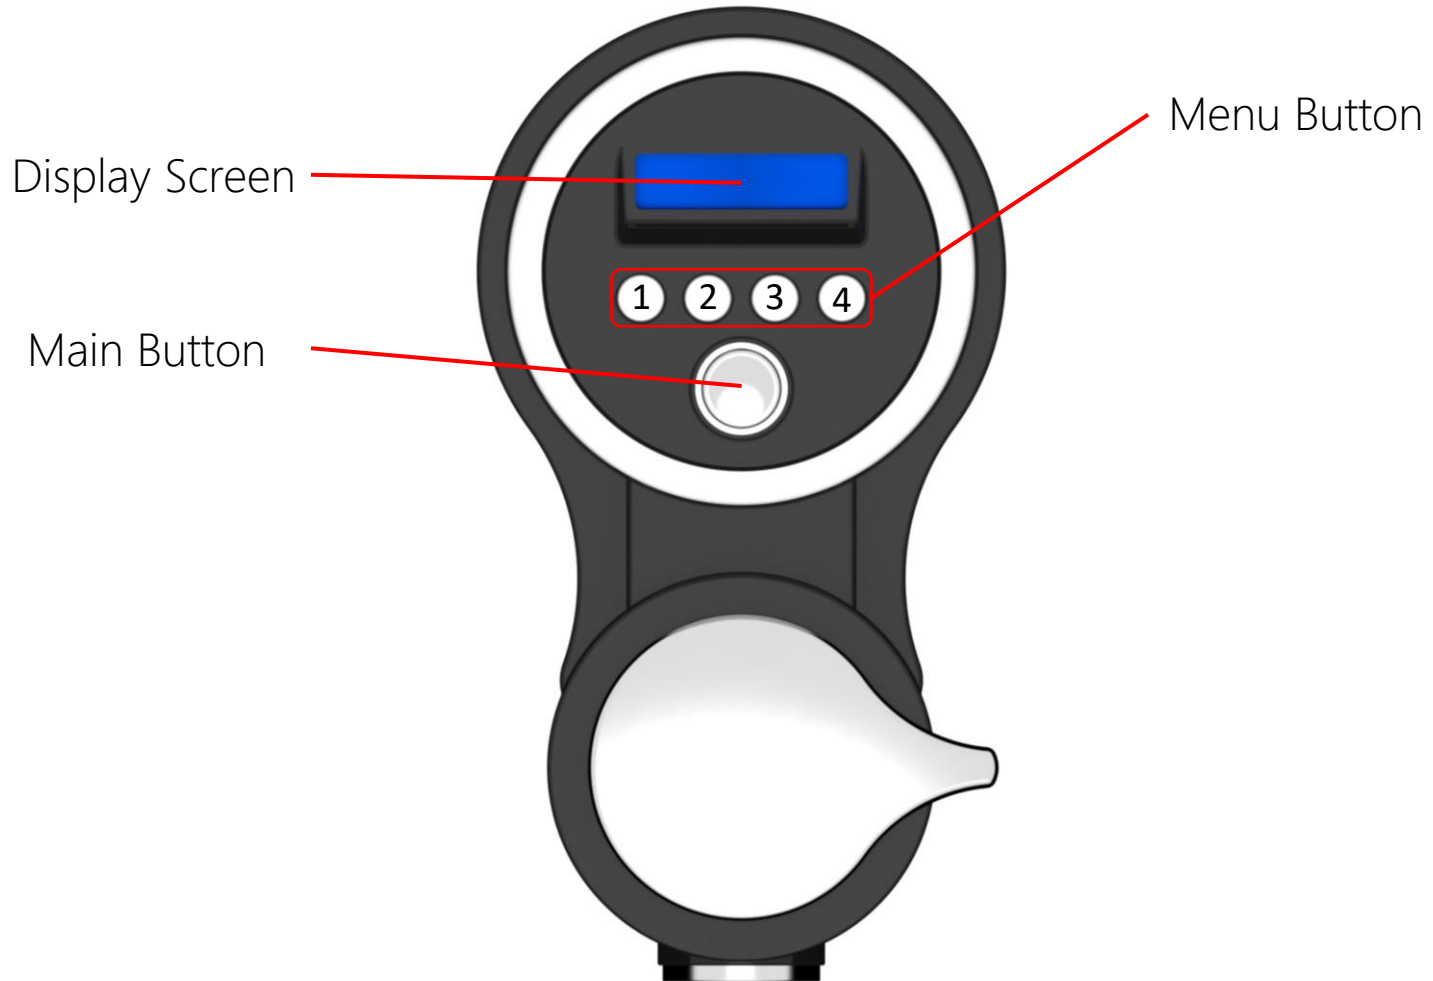


Button Introduction



Startup Manual

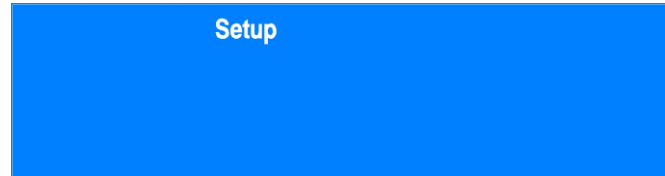

Turn on, screen lights up

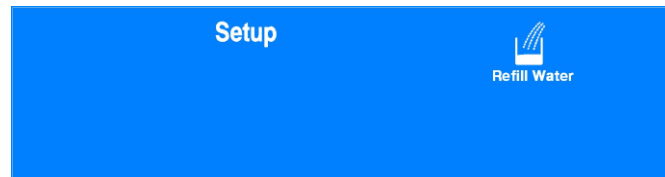

Press Main Button, icon flashes, boiler begin refill water
Need to wait water coming out before you go next step
*First time refill water takes about 1 minute



After water came out, press main button will display water temperature and boiler start heating up, the temperature display flashes



After heating to the set temperature, temperature display stop flashes (Power on preset temperature is what Menu 1 set)

Switch Menu



Long press main button, enter setting mode.(Setup icon lights up)
After that you can press which menu button
you want to set parameters.

Mode Selection



Enter setting mode will display three different mode that you can choose

ESP Espresso Coffee
drP Drip Coffee
tEP Tea Espresso



Espresso Coffee Mode Setup Manual

Espresso Coffee Mode Setup Manual



Water Temp. is **Water Temperature**
Units are °C or °F



Pre-Infuse using natural water pressure
If there is no water pressure, water will not come out
Unit is **sec.**



Delay Time **Pre-Infuse Waiting Time**
Unit is **sec.**



Brew Time unit is **c.c.**

Espresso Coffee Mode Setup Manual



nPd is **Natural Pressure Down**

Set On can simulate Lever Coffee Machine pressure change
In the end the water pressure will going down slowly

Set OFF the pressure from start to finish remains unchanged

Espresso Coffee Mode Setup Manual



rro is Reduce Ratio(%)
Means in the last how much % water volume start pressure down
For example : Brew Time set 60c.c.
rro(Reduce Ratio) is 30
will in the last 18 (60*30%)c.c. start pressure down

*nPd set OFF will not work



Espresso Coffee Mode Pressure Change



nPd On



nPd OFF



Drip Coffee Mode Setup Manual

Drip Coffee Mode Setup Manual



Water Temp. is **Water Temperature**
Units are °C or °F



Pre-Infuse unit is **c.c.**



Pd is **Pre-Infuse Divide**
Unit is **c.c.**



Pdt is **Pre-Infuse Divide Waiting Time**
Unit is **sec.**

* Press main button to change settings, changes completed press to save settings
* Setting completed long press main button back to standby mode

Drip Coffee Mode Setup Manual



Delay Time Pre-Infuse Waiting Time
Unit is sec.



Brew Time is Extract Water Volume
Unit is c.c.



bd is Brew Time Divide
Unit is c.c.



bdt is Brew Time Divide Waiting Time
Unit is sec.

Drip Coffee Mode Setup Manual



Pro is Pump Ratio
Can control water flow rate in Drip Coffee mode
Unit is %

- * Press main button to change settings, changes completed press to save settings
- * Setting completed long press main button back to standby mode



Drip Coffee Mode Brew Profile



Drip Coffee Mode divide into Pre Infuse and Brew Time, Added together will get the total water volume, and Delay Time is the waiting time between those.

According to **volume divide** and **divide waiting time** can divide Pre Infuse and Brew Time into paragraphs

For Example : Brew Time 160 c.c.
bd 50 c.c.
bdt 5 sec

Water will come out 50 c.c. and wait for 5 sec
Then come out 50c.c. and wait for 5 sec
Repeat the above setting until 160 c.c. comes out

If volume divide is same or bigger than Pre-Infuse/Brew Time, water will come out in once time.

*Although Drip Coffee setting method is same as Tea Expresso, but wrong mode will cause water volume get inaccurate, so please select the correct mode.



Tea Espresso Mode Setup Manual

Tea Espresso Mode Setup Manual



Water Temp. is **Water Temperature**
Units are °C or °F



Pre-Infuse unit is **c.c.**




Pd is **Pre-Infuse Divide**
Unit is **c.c.**



Pdt is **Pre-Infuse Divide Waiting Time**
Unit is **sec.**

* Press main button to change settings, changes completed press to save settings
* Setting completed long press main button back to standby mode

Tea Espresso Mode Setup Manual

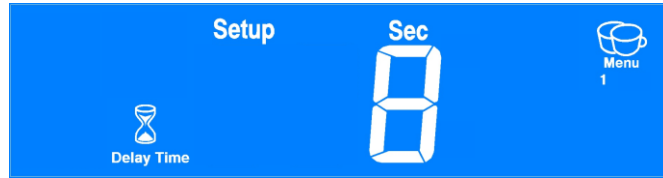

Delay Time Pre-Infuse Waiting Time
Unit is sec.



Brew Time is Extract Water Volume
Unit is c.c.



bd is Brew Time Divide
Unit is c.c.



bdt is Brew Time Divide Waiting Time
Unit is sec.

Tea Espresso Mode Setup Manual



Tea Espresso Mode divide into Pre Infuse and Brew Time, Added together will get the total water volume, and Delay Time is the waiting time between those.

According to **volume divide** and **divide waiting time** can divide Pre Infuse and Brew Time into paragraphs

For Example : Brew Time 160 c.c.
bd 50 c.c.
bdt 5 sec

Water will come out 50 c.c. and wait for 5 sec
Then come out 50c.c. and wait for 5 sec
Repeat the above setting until 160 c.c. comes out

If volume divide is same or bigger than Pre-Infuse/Brew Time, water will come out in once time.

*Although Tea Espresso setting method is same as Drip Coffee, but wrong mode will cause water volume get inaccurate, so please select the correct mode.



System Parameters Setup Manual

System Parameters Setup Manual



U1 is Unit Change
Units are °C or °F



FFr is Factor Flow Rate
Used when water volume inaccurate,
if water come out lower than set value
you should adjust parameter higher.
Unit is %




* Press main button to change settings, changes completed press to save settings
* Setting completed long press main button back to standby mode

System Parameters Setup Manual



OFS is **Temperature Offset**
Units are °C or °F

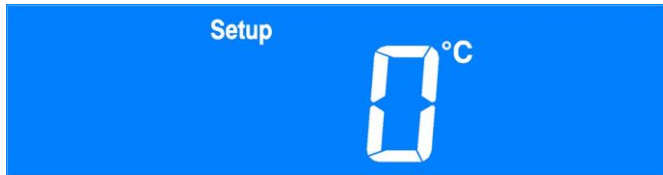

AFL is **Auto Flush**
At standby mode, press menu button 1 and 4 in same time
can auto flush too